




SCENARIO 1: P TRAP DIRECTLY BELOW DRAIN USING EXTERNAL THREADS AND STRAIGHT FITTING

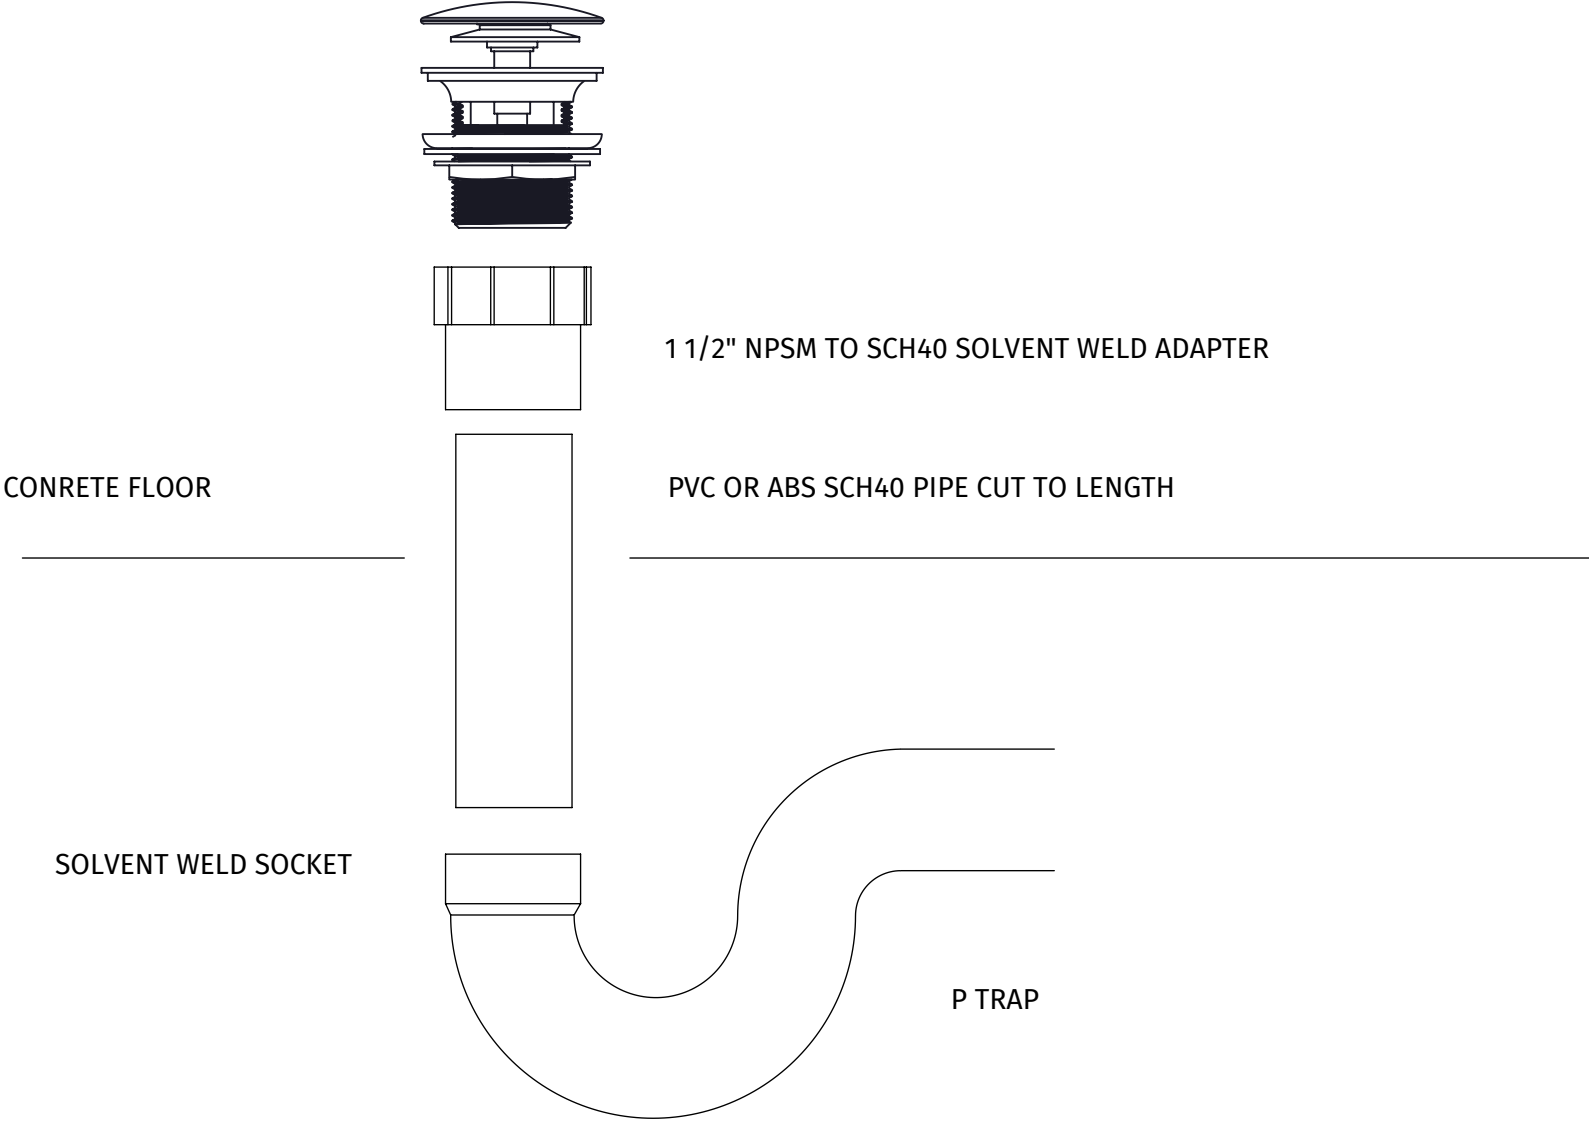


SCENARIO 2A: OFFSET P TRAP USING EXTERNAL THREADS

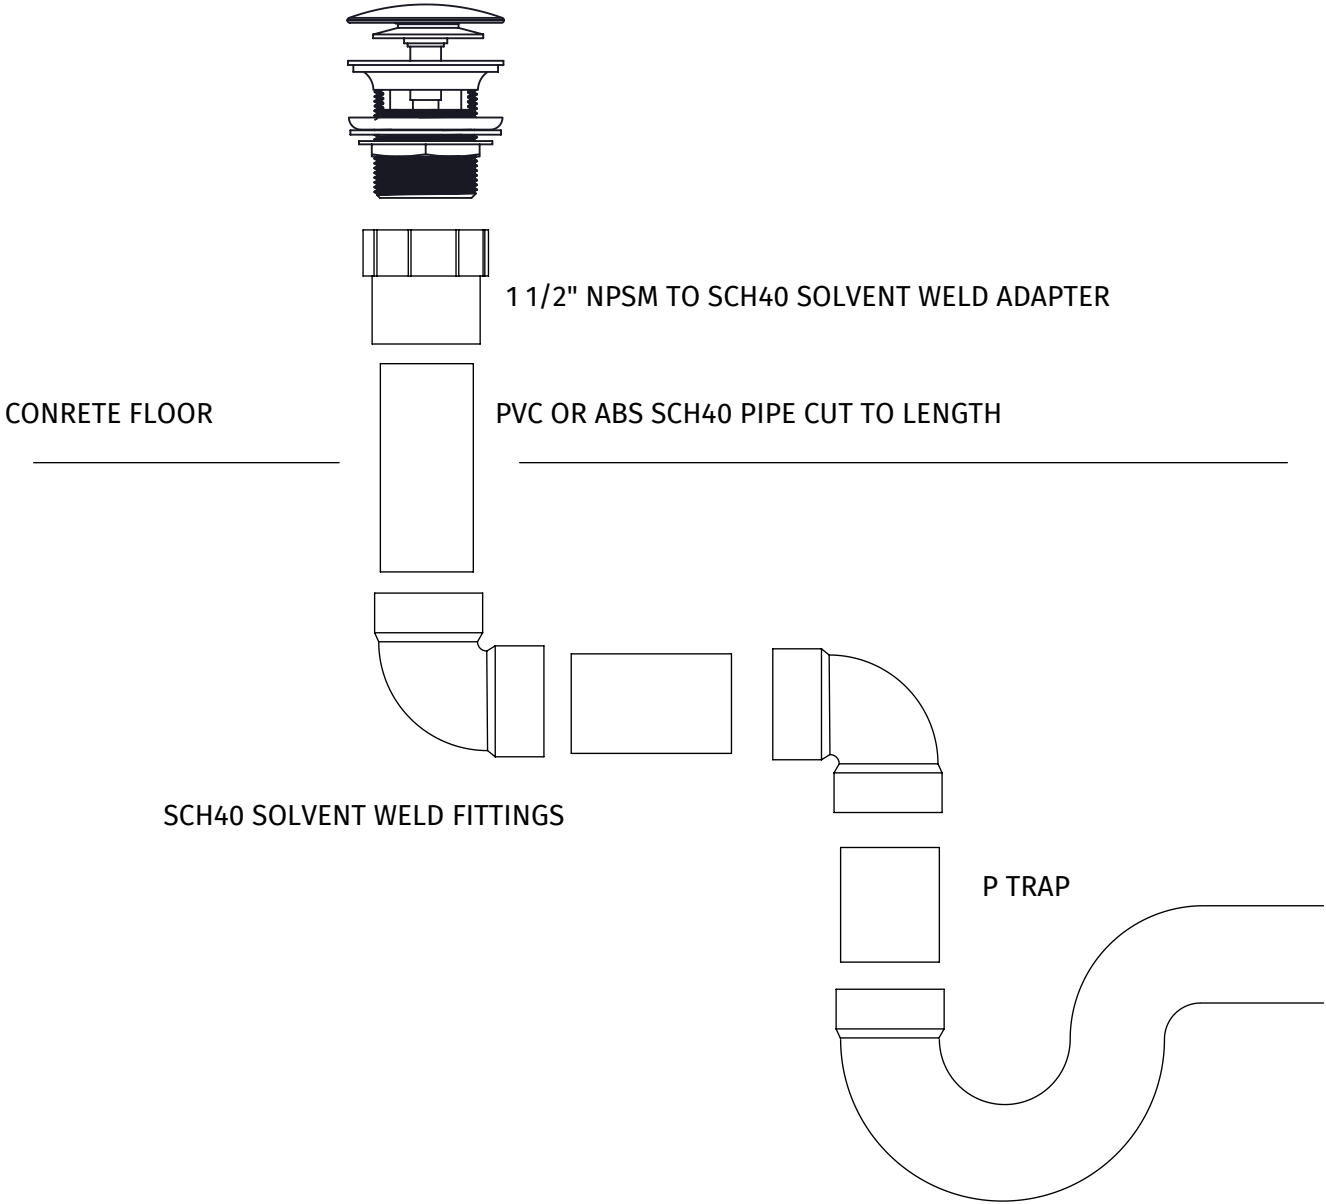

SCENARIO 2B: OFFSET P TRAP USING EXTERNAL THREADS AND 90° DRAIN SHOE

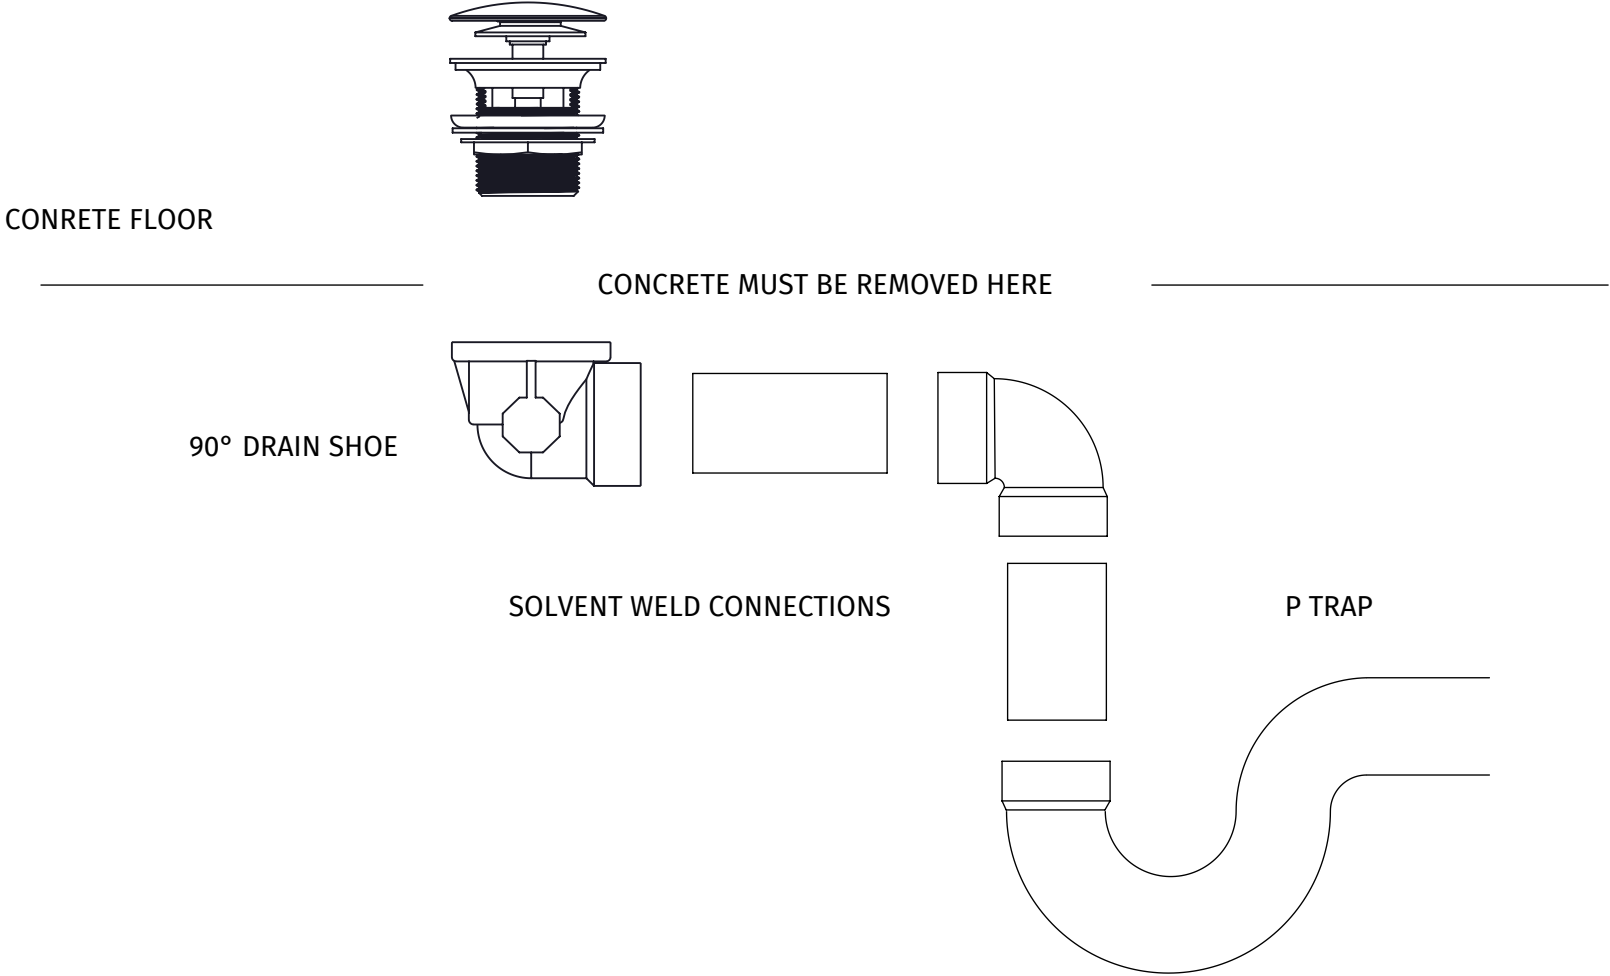

SCENARIO 3: TAILPIECE WITH ISLAND TUB DRAIN ADAPTER

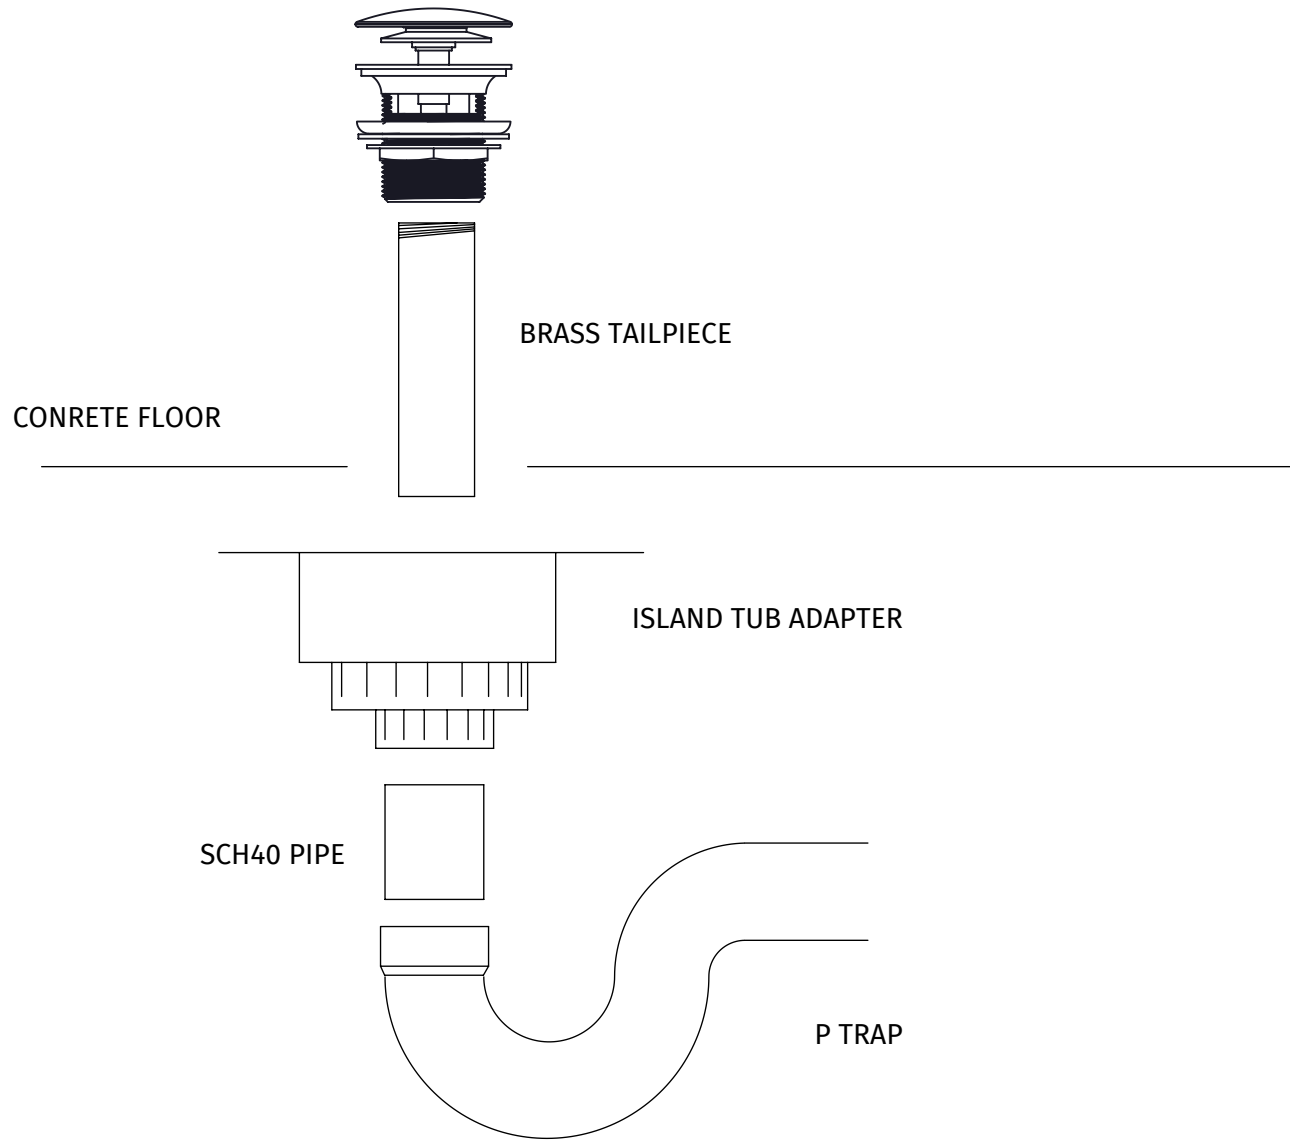

SCENARIO 4: TAILPIECE WITH SLIP JOINT CONNECTION

